




TOYOTA **Avensis (T22)** 1.6i 16V 4A-FE

1998 - 2000

Wiring Diagram - Bosch Motronic MP 5.4 05/1999 ->

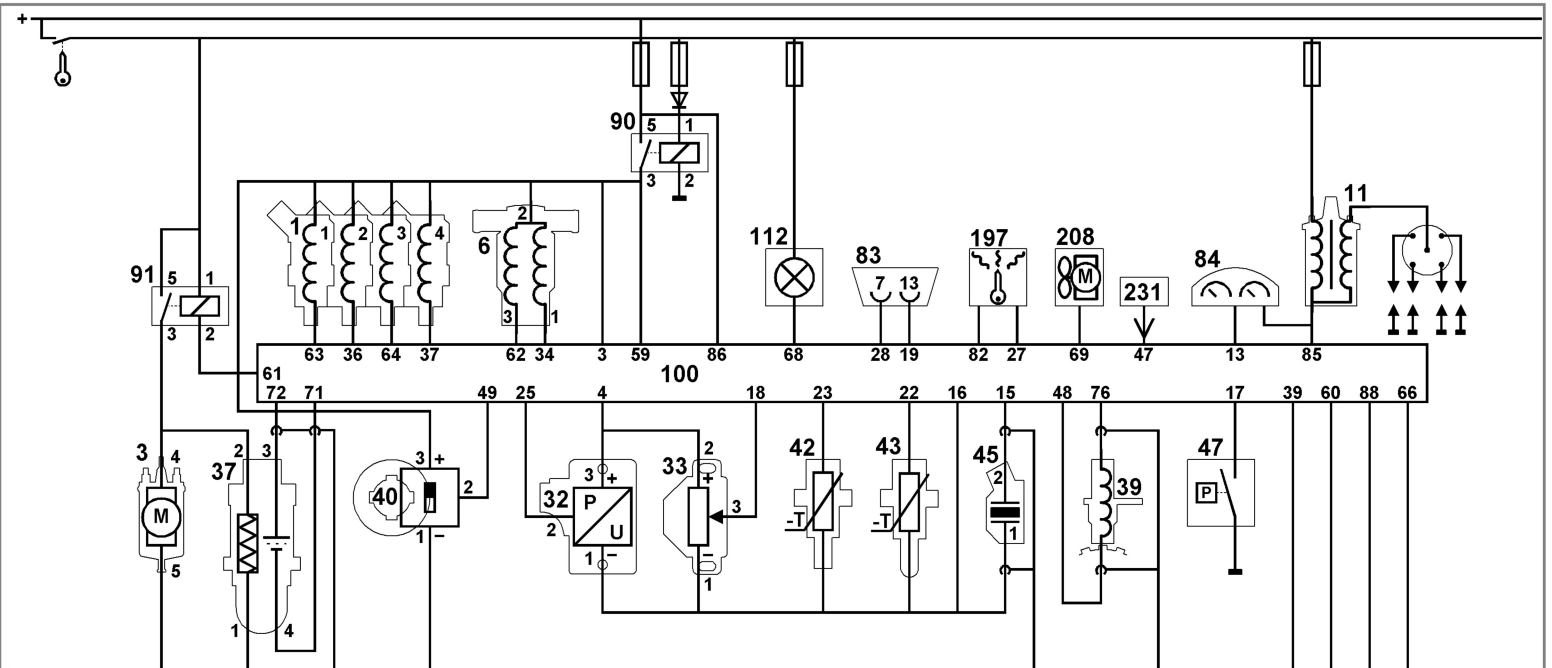

1	injector
3	fuel pump
6	idle speed control valve
11	ignition coil
32	MAP sensor
33	throttle position sensor
37	oxygen sensor
39	magnetic pickup on crankshaft
40	Hall/MRE sensor on camshaft
42	coolant temperature sensor
43	air temperature sensor
45	detonation sensor
47	power steering pressure switch
83	diagnostic connector
84	dashboard
90	main relay
91	fuel pump relay
100	control unit
112	'check engine' light
197	transponder key control unit
208	cooling fan
231	speed signal